




## Pack Contents:

1. 2 x Hanger and Bolt
2. 2 x Mounting brackets
3. 4 x Fixing screws
4. 1 x Spanner

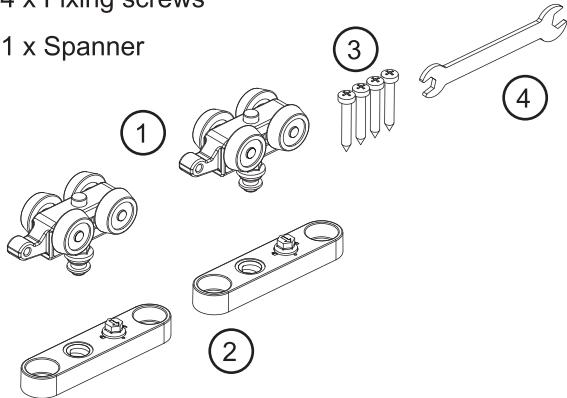


## 1. Panel Preparation


(a) Use bracket as template to mark the hole position on panel. Make sure the 2 brackets are in the same orientation.

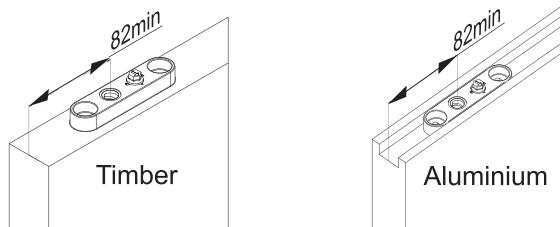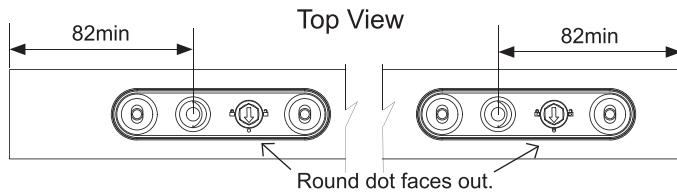


(b) Route 12mm recessed slot (timber only) and pre-drill pilot holes for 10G screws.

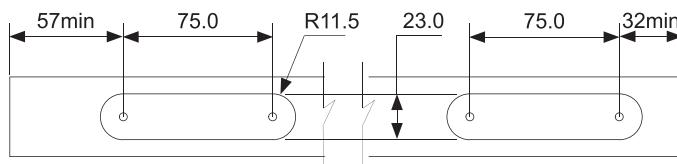

(c) Fix bracket with mounting screw provided.

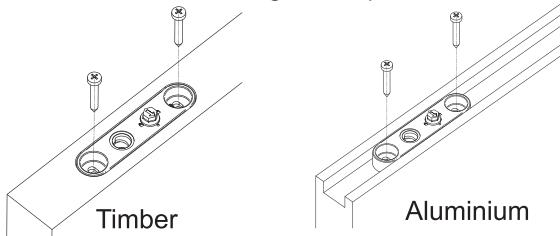


(d) Make sure the arrow on the locking lever points to the round dot.

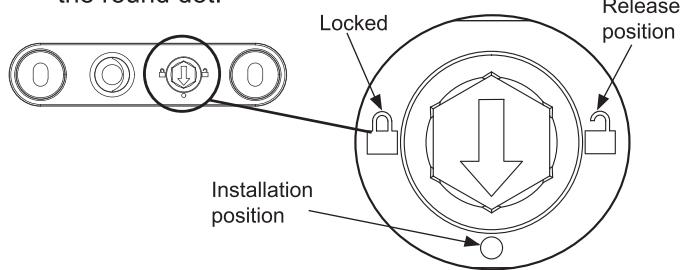


## 2. Hardware Installation

(a) Insert hanger with bolt into the track.

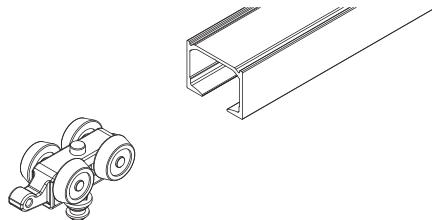


(b) If using 120CS clip stops: please ensure correct orientation of hanger to engage the 120CS

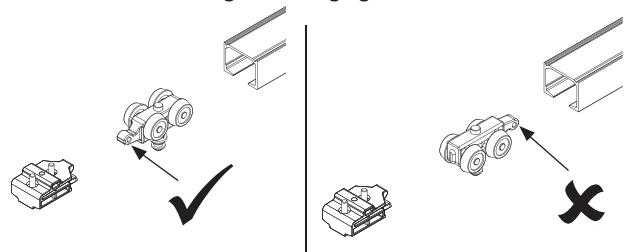


## 3. Attach Panel to Hanger


(a) Carefully lift the door panel with brackets, lining up the opening of the bracket with the bolt on hangers.

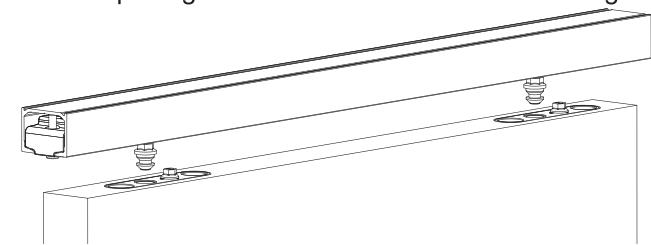

(b) Use the spanner to turn the locking lever 90 degrees clockwise so the arrow points to the lock symbol.

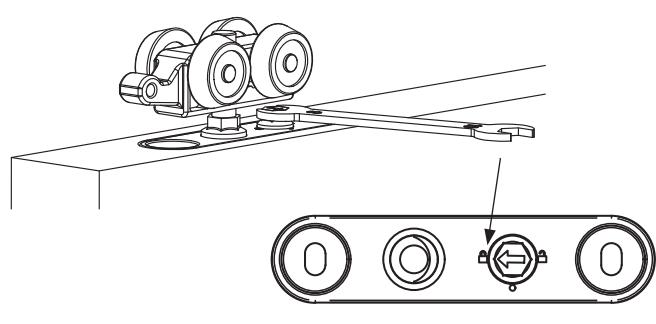


(c) Adjust the height using the spanner provided. Clockwise rotation will lower the panel, and anti-clockwise will raise the panel.

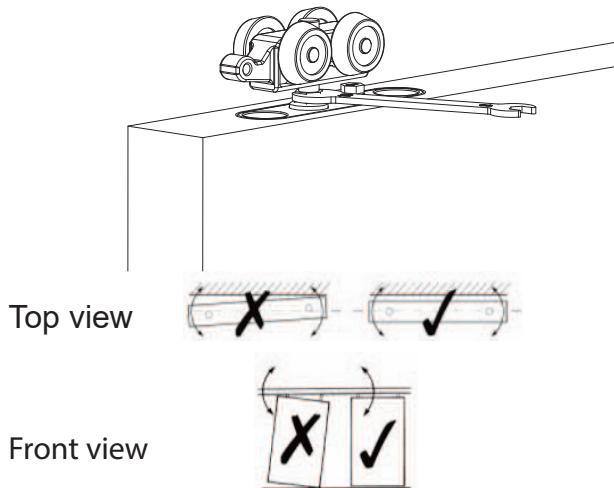


## 4. Releasing the Panel

(a) To release the panel: support the panel and turn the locking lever anti-clockwise to the released position and then lower the panel.

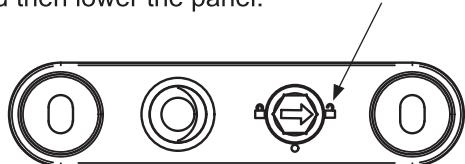


(b) Make sure to turn the locking lever to installation position after the panel is removed.

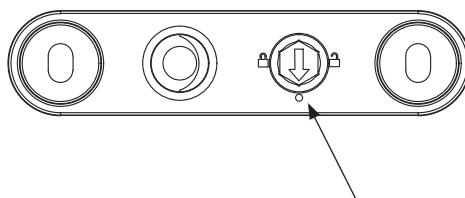

## 5. System Overview


End elevation of 120E track, 58JNP hanger, panel and 105AA guide option.

105AA guide option with Aluminium panel and 101N guide option with timber panel shown

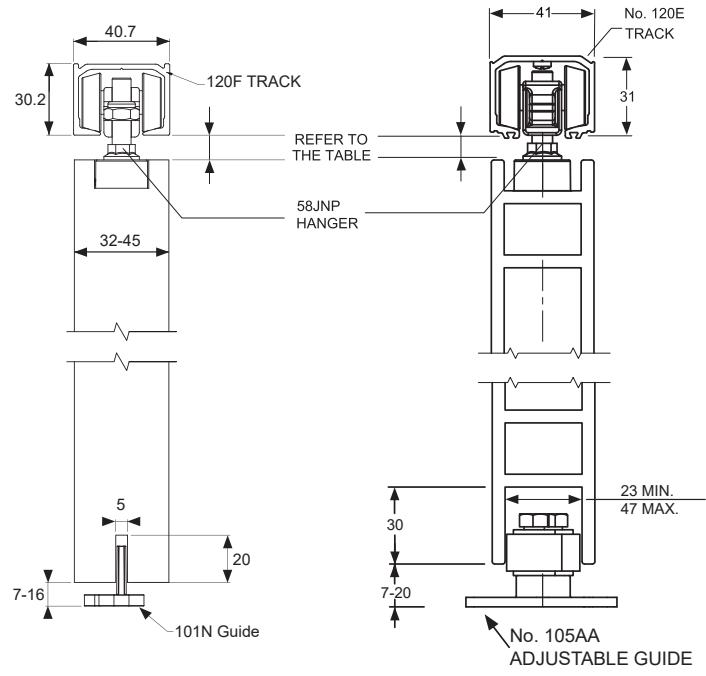

Track	W/Soft close	W/O Soft close
120C	14-20	10-20
120F	14-20	10-20
120E	12-18	8-18

### 105AA guide installation positions

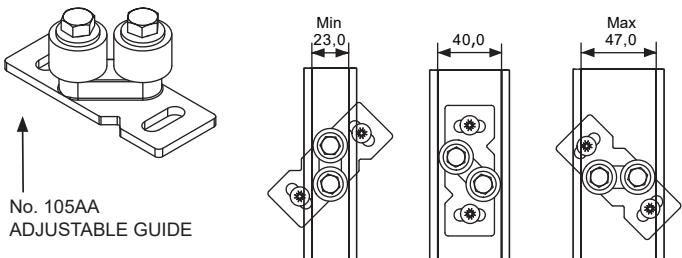

## Care and Maintenance

### General

Inspect all fixing bolts for tightness every six months, including those securing brackets. Tighten if necessary. Routinely check for wear and if excessively worn, the part should be replaced.

To help prevent surface corrosion, wash regularly with soap or mild detergent and warm water followed by rinsing with clean cold water and wipe dry.

### Track

Keep track free from obstruction and excessive dirt or water. Visible surfaces should be cleaned using a damp cloth and mild detergent, then wiped dry.

### Hangers

All hangers are fitted with lubricated ball-bearings, requiring no greasing. If doors 'settle' and door clearance is reduced causing friction, raise the door by the hanger adjustment nuts. Wash as per the above recommendation and apply a light application of corrosion preventative to all surfaces, using a dry cloth to remove excess.

### Guides

Guide roller and guide channel must be kept clear and free of obstructions. Wash as per the above recommendation and apply a light application of corrosion preventative to all surfaces, using a dry cloth to remove excess.

Allegion (Australia) Pty Ltd  
Freephone: 1800 098 094  
Email: [info.au@allegion.com](mailto:info.au@allegion.com)  
[www.brio.com.au](http://www.brio.com.au)

Allegion (New Zealand) Limited  
Freephone: 0800 477 869  
Email: [nzinfo@allegion.com](mailto:nzinfo@allegion.com)  
[www.brionz.com](http://www.brionz.com)

  
**ALLEGION™**